

Nimble Sidekick NK50Y System: NK50Y shows error by flashing-red indicator

- â€¢ Make sure the disc caddy all the way inserted into the Sidekick, then reboot the unit.
- â€¢ Remove all discs from the disc loader. Make sure no disc left in disc caddy.
- â€¢ Make sure that disc caddy doesn't get stuck between NK50Y and Epson printer.
- â€¢ Reinstall NK50Y (refer to the Hardware Installation section).

Unique solution ID: #1124

Author: Acronova Tech Support

Last update: 2010-12-08 04:11