

Nimble USB: The unit loads multiple discs at the same time, fails to unload discs, or discs are jammed

Reason 1:

Discs do not have a standard size, either diameter too larger or too small.

Recommendation 1:

Check if discs used are standard sized discs. Try different brand of discs.

^

Reason 2:

Discs are too sticky

Recommendation 2:

Loosen the discs before use or avoid using sticky discs.

^

Unique solution ID: #1019

Author: Acronova Tech Support

Last update: 2009-11-24 04:42