

## *Nimbie Sidekick NK50V: Epson printer shows error on indicators or error status window*

â€¢ Go to MyNK50V Main Menu, click the Stop NK50V button. Turn off Epson printer; wait for one minute and turn it on.

â€¢ Detach NK50V from Epson printer. Test the printer itself to ensure proper operation.

â€¢ Refer to Epson printer manual for error message and troubleshooting tips.

*Unique solution ID: #1110*

*Author: Acronova Tech Support*

*Last update: 2010-11-02 09:53*