

Nimbie Sidekick NK50V: Jammed disc loader or it loads more than one disc at a time

â€¢ Some discs may be sticky and may stuck together. Loose the discs before loading them into the loader.

â€¢ Reduce the quantity of discs in the Loader. Try 15 to 20 discs first.

â€¢ Use discs of the same brand and lot. Not to mix various disc brands.

â€¢ Remove all discs from the loader. carefully load only one disc into the disc loader and assure it is firmly resting on the three wheels. You may then gradually load additional discs on top of the first disc, until the loader is full.

â€¢ Try discs of different brands. Some discs are out-of-specification in diameter or thickness, or even be distorted.

Unique solution ID: #1113

Author: Acronova Tech Support

Last update: 2010-11-02 09:57