

Nimble Sidekick NK50V: NK50V shows error by flashing-red indicator

- Make sure the disc caddy all the way inserted into the Sidekick, then reboot the unit.
- Remove all discs from the disc loader. Make sure no disc left in disc caddy.
- Make sure that disc caddy doesn't get stuck between NK50V and Epson printer.
- Reinstall NK50V (refer to the Hardware Installation section).

Unique solution ID: #1115

Author: Acronova Tech Support

Last update: 2010-12-08 04:10