

## *Nimble Sidekick NK50Y System: NK50Y shows error by flashing-red indicator*

- Make sure the disc caddy all the way inserted into the Sidekick, then reboot the unit.
- Remove all discs from the disc loader. Make sure no disc left in disc caddy.
- Make sure that disc caddy doesn't get stuck between NK50Y and Epson printer.
- Reinstall NK50Y (refer to the Hardware Installation section).

*Unique solution ID: #1124*

*Author: Acronova Tech Support*

*Last update: 2010-12-08 04:11*