

Xymba Standalone: When turning on the unit, the LED light is off, the fan is on but the unit does not initialize.

Reason:

No electricity to the mainboard or the mainboard is damaged.

Recommendation:

Please contact your supplier.

Unique solution ID: #1023

Author: Acronova Tech Support

Last update: 2009-11-24 04:44